

## Important Safety Instructions


**CAUTION** PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

### WARNING




DO NOT attempt to operate if picture fails or no sound is heard. Stop using the unit and turn it off immediately if there is any smoke or burning smell. If unit is damaged, it could cause fire or electrical shock.

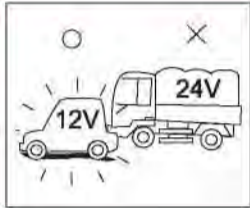

This product is designed for DC 12V. It is recommended to check with a trained "Authorized Dealer" for using this unit in a RV, truck or bus application.




DO NOT install unit where it may obstruct driver's sight or cause possible injury to passengers. DO NOT allow installation to interfere with normal vehicle operations. Wiring and installation should not interfere with the brake pedal, steering wheel or transmission shift lever.

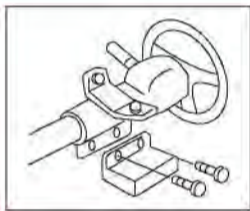

DO NOT remove any screws or hardware from vehicle to install products.


### WARNING

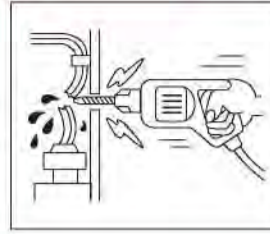

Inspect any vehicle areas before drilling any holes for mounting or wiring of unit. Make sure to check behind installation area to prevent damaging any existing vehicle wiring or other connections. Failure to do so could result in vehicle malfunction or impaired vehicle operation.



All wiring must be routed safely and should not distract the driver's attention during normal operating conditions. DO NOT allow wiring to interfere with operation of the vehicle's brake pedal, shift lever or steering wheel.

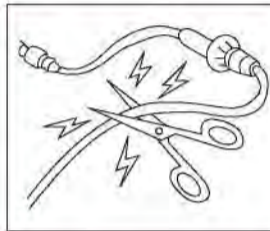


DO NOT cut or modify any DIN cables with fuse built-in. This could render such protective circuit inactive and potentially result in permanent damage to the unit or vehicle. Make sure both DIN cable and other wiring is not run where it may be cut or damaged.



The slots and openings in the unit is provided for necessary ventilation. These must not be blocked to ensure reliable operation.


### CAUTION

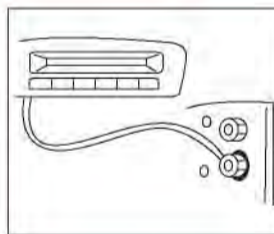


For the best results, follow wiring diagram for products as shown in the manual. Do not place unit on uneven or unstable surfaces, avoid dusty areas and unsealed doors, or openings where water may be splashed.



DO NOT watch the unit while driving. Distracting the driver from proper operation of the vehicle can result in possible accident or injury. Proper installation allow the driver to only watch TV when the vehicle is stopped and the parking brake is applied.

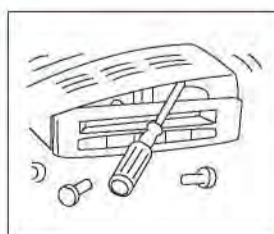


DO NOT disassemble or modify the product as it may cause accident, fire or electrical shock.

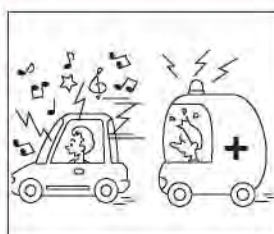


Set the volume to a moderate level, which will not prevent your hearing outside noises such as emergency vehicles.

### CAUTION

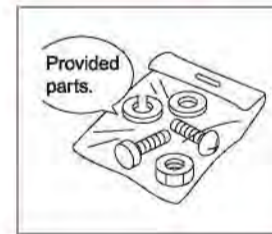

Use provided parts. Over-sized hardware may cause an electrical short or result in product not being mounted securely.

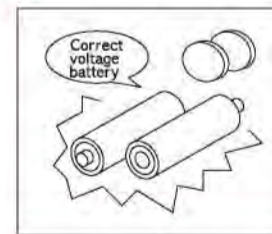

Use correct voltage batteries only. Make sure to insert batteries observing correct polarity. Using old and new batteries is not recommended. Keep small objects such as batteries out of the reach of children. Swallowing them may result in serious injury.



Keep the remote control in safe place when not in use to insure that the remote control does not interfere with the vehicle operation if it is dropped or shifts while driving.



DO NOT install antennas where they could cause unexpected accident or injury to pedestrians.

# User's Manual

## Description of Remote Control



1	POWER	Power On/Off
2	V.SEL	Video Mode selection
3	DIMMER	Dimmer On/Off
4	USB/SD	USB/SD Hot Key
5	MENU	Menu display On/Off
6	ASPECT	4:3, 16:9 changes
7	MUTE	Mute On/Off
8	▲	Cursor Up
9	◀	Cursor Left
10	▶	Cursor Right
11	▼	Cursor Down
12	ENTER	Function select
13	Vol +	Volume up
14	Vol -	Volume down
15	⏸	Play & Pause
16	■	Stop
17	SET-UP	DVD Menu Set-up
18	⏮	Previous Chapter
19	⏭	Next Chapter
20	⏩	Fast Forward
21	⏪	Rewind
22	DISPLAY	Display Mode (Normal, Zoom, Wide)
23	DVD-ROOT	Back to DVD-Root
24	SUB-TITLE	Sub-Title selection
25	AUDIO	Audio Mode

Congratulations on your new purchase of a Headrest Entertainment system. Please take a moment to fully review this owner's manual thoroughly prior to the initial operation, which will provide you with the best understanding to properly operate your new headrest Entertainment System.



## Description of Buttons

 
	DVD/USB/SD mode	MENU mode	V. SEL Mode
⏻	Power On/ Off		
◀	Volume up	Left cursor in MENU mode	Left cursor in V.SEL mode
▶	Volume down	Right cursor in MENU mode	Right cursor in V.SEL mode
MENU	MENU Display On/Off		
V.SEL	Video Mode Selection		
⏮	Previous Chapter in DVD, USB, SD mode	Up cursor in MENU mode	Up cursor in V.SEL mode
⏭	Next Chapter in DVD, USB, SD mode	Down cursor in MENU mode	Down cursor in V.SEL mode
⏸	Play / Pause / Enter		



## Description of Logos

AV	AV Video input port	USB	USB Memory slot
SD	SD Card slot	Headphones	Wired earphone Jack
▼	Open & Close button		


## Wiring Diagram

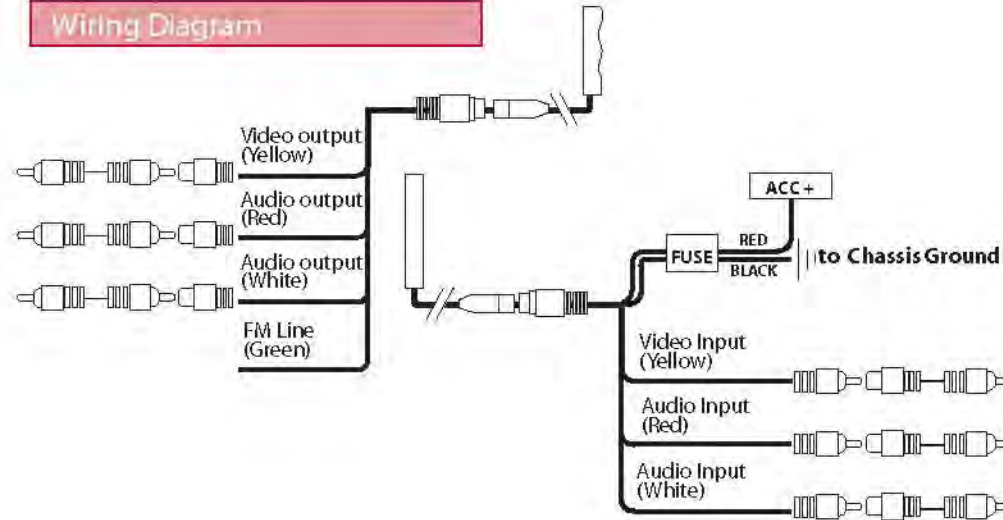


## How to Change Video Sources

This unit has 5 different Modes. DVD, SD Card, USB, AV, AV2.

- DVD**
  - Press Open button on the unit to load DVD or CD Disc.
  - Completely close the LCD flip until you hear the sound "Click"
  - DVD or CD disc will be playing automatically.
- USB**
  - Put USB Memory on the slot located on left bottom side
  - Insert USB Memory firmly and press "SD/USB" button on the remote or press "V.SEL" button on the unit.
  - Move cursor to the right to Play.
- SD Card**
  - Put SD card (We recommend SD MMC) on the slot located on left bottom side
  - Insert SD card firmly and press "SD/USB" button on the remote or press "V.SEL" button on the unit.
  - Move cursor to the right to Play.

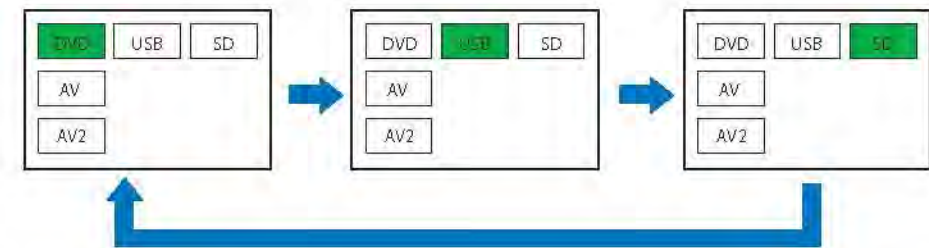

- AV**
  - AV input is located on the left bottom side of unit (right next to SD card slot)
  - You can simply connect portable or handheld device to this input on the front.
- AV 2**
  - AV 2 input is located at the end of DIN cable (Left side DIN Cable)
  - This input designed for slave external device such as TV tuner or DVB-T

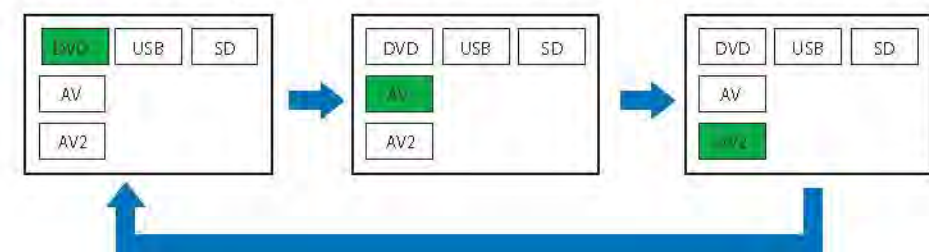

## General Specifications

No	Functions	7" DVD headrest	9" DVD headrest
1	Power	DC 12V (11V ~ 16V)	DC 12V (11V ~ 16V)
2	LCD Screen	7"	9"
3	Resolution	480 X 234	640 X 234
4	Aspect Ratio	16:9	16:9
5	AV Inputs	2 AV Inputs (One on the front panel)	2 AV inputs (One on the front panel)
6	AV Outputs	1 AV output	1 AV output
7	Video Input Level	1Vp-p, 75 ohm (Composite)	1Vp-p, 75 ohm (Composite)
8	IR Frequency (A Ch.)	2.3MHz / 2.8MHz	2.3MHz / 2.8MHz
9	IR Frequency (B Ch.)	3.2MHz / 3.8MHz	3.2MHz / 3.8MHz
10	IR Transmitter range	1m + 30 degree	1m + 30 degree
11		3m + 15 degree	3m + 15 degree
12	DVD Player	Fully integrated with Top loading DVD player	Fully integrated with Top loading DVD player
13	Media input	Via USB and SD Slot (Video, Audio and Picture viewer)	Via USB and SD Slot (Video, Audio and Picture viewer)
14	Post Diameter	10mm Post with 12/12.5/12.7/13.8/14/16mm Post adaptor	10mm Post with 12/12.5/12.7/13.8/14/16mm Post adaptor
15	Posts distance	Adjustable 110mm ~ 210mm	Adjustable 110mm ~ 210mm
16	FM Transmitter	Built-in	Built-in
17	Remote Control	Full function remote control included	Full function remote control included
18	Wireless headphone Support	Yes	Yes
19	Color Choices	Black, Beige, Light gray, Dark gray	Black, Beige, Light gray, Dark gray
20	Multi Language Support	Yes (English, Deutsch, Spanish, French, Russian and Polski)	Yes (English, Deutsch, Spanish, French, Russian and Polski)