

OWNER'S MANUAL

HP-530SB



**PLEASE READ THE OPERATING MANUAL BEFORE OPERATING THE
UNIT AND KEEP THE BOOKLET FOR FUTURE REFERENCE.**

IMPORTANT SAFETY INSTRUCTIONS

 
THE IMPORTANT SAFETY INSTRUCTIONS SHALL INCLUDE, AS APPLICABLE TO THE APPLIANCE, STATEMENTS THAT CONVEY TO THE USER THE INFORMATION ITEMIZED IN THIS PARAGRAPH:

1. Read these instructions - All the safety and operating instructions should be read before the appliance is operated
2. Keep these instructions - The safety and operating instructions should be kept for future reference.
3. Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions - All operation and use instructions should be followed.
5. Do not use this apparatus near water - The appliance should not be used near water; for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Clean only with dry cloth - The appliance should be cleaned only as recommended by the manufacturer.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Only use attachments / accessories specified by the manufacturer
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for a long periods of time.
13. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
14. Wall and Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
15. Power Lines - An outdoor antenna should be located away from power lines.
16. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the Enclosure through openings.
17. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
18. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.




ACCESSORIES INCLUDED

RCA Cable

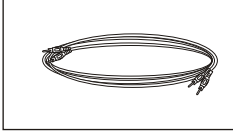


Aux In Cable

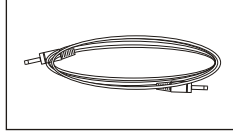 

Remote control



 
Mounting Hardware

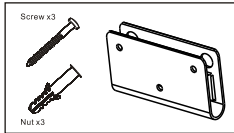

Manual



 CONNECTION DIAGRAM

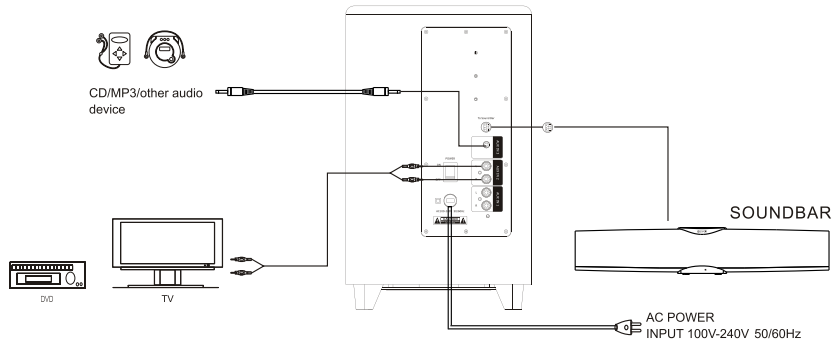

NOTE: This unit is **not** magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the unit further away from the TV or monitor if unnatural color shifts or image distortion occurs.

REMOTE CONTROL BATTERY

To use the remote control, please ensure the remote control battery 2xAAA (not included) is installed properly. Replace the remote control battery when it stops working. It is highly recommended to use a good quality AAA batteries.

Note:

 
1. Room lighting and battery life can affect the operating range of the remote control.

LOCATION OF CONTROLS

Main Unit

1. AC POWER: To connect wall outlet power.
2. POWER On/Off : To turn the unit power on/off.
3. AUX IN 3: For the connection of external audio device with 3.5mm
4. Data cable connect to soundbar
5. AUX IN 1 & 2: To connect TV or DVD with RCA cable.


SUBWOOFER

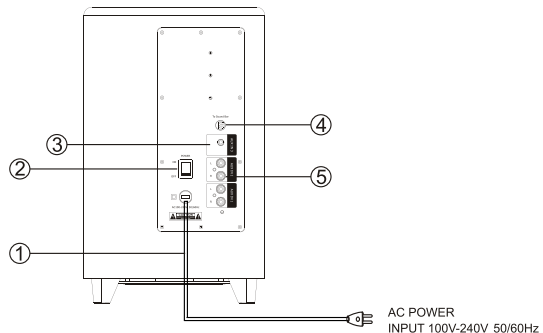

LOCATION OF CONTROLS

Remote Control

 - 1) Standby on/off button.
- 2) Mute button.
- 3) Subwoofer Volume Up/Down button.
- 4) TREBLE level Up/Down button.
- 5) BASS level Up/Down button.
- 6) Select mode.
- 7) Restore settings.
- 8) SRS on/off button.
- 9) Main Volume Up/Down button.

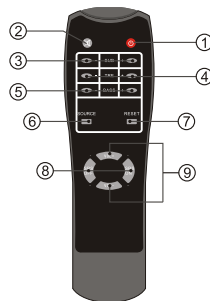

TROUBLESHOOTING GUIDE

Symptom	Possible Problem	Solution
The unit does not respond (no power)	AC power is not plugged into a wall outlet or the connector is not plugged into the power supply jack on the back of the unit.	Plug the AC power into a wall outlet and plug the connector into the supply jack on the unit.
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working.
Unit gets warm after extended play at high volume	This is normal.	Turn the unit off for a period of time or lower volume.
No remote control operation	operation	The battery may be discharged, try replacing the battery.
No sound	low volume	If the source has a volume control, increase output level.

SETTING AND OPERATION

This unit operates using an AC power with 100V-240V output.

1. Plug the unit into a convenient 100V-240V 50/60Hz wall outlet.

Basic Operation

- Turn the unit ON by pressing the POWER button at rear of subwoofer.
- Press POWER buttons on the remote control.
- Press the SOURCE button on the remote control to select RCA / Aux modes.
- The volume of the unit can be controlled by pressing the VOL +/- Buttons on the remote control.
- The unit volume can be muted by pressing the MUTE button on the remote control.
- The unit can be switched to Standby mode by press the POWER button on the remote control.

SETTING AND OPERATION

AUX IN mode

You can also play CD or other MP3/digital audio player on this unit via the AUX IN jack.

1. Plug one end of the 3.5mm audio cable (included) into the headphone or Line out jack of your external audio device. Plug the other end of the cable into the unit AUX-IN jack located on the back of this unit
2. Switch on the external audio device.
3. Press the SOURCE button repeatedly until the AUX mode.
4. The volume level can now be controlled through the remote control. Operate all other functions on the auxiliary device as usual.

NOTE:

- (1) If you connected the Line Out Jack of your external device then you only need to adjust the volume level of this unit. If connected to the Headphone Jack of your external device then you may need to adjust both the volume control of your external device and the volume control of this unit to find the most desirable volume setting.
- (2) Press the Power button and turn off the unit when you finish listening. Don't forget to switch off the power of your external device as well.

CARE AND MAINTENANCE

- Do not expose the unit to excessive force, shock, dust tor extreme temperature.
- Do not tamper the internal components of the unit.
- Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
- Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
- Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

SPECIFICATIONS

Main Unit	
Subwoofer:	7 7/8"W x 11 7/8"H 7 7/8"D
Soundbar:	20 1/2"W x 4 1/3"H x 4 1/3"D
Power output:	50W x 2 + 75W x 1
Audio input:	RCA x 2, 3.5mm
Standby power consumption:	<1W
Supply voltage:	100-240V 50/60Hz
Remote Control	2 X AAA Battery(not included)

DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.



ALL RIGHTS RESERVED
COPYRIGHT DENVER ELECTRONICS A/S



WWW.DENVER-ELECTRONICS.COM