

POWER ACOUSTIK®

Instruction Manual



Model:HP-560SB

2.1Ch Audio Sound Bar

**READ THESE INSTRUCTIONS COMPLETELY
BEFORE USE AND KEEP FOR FUTURE REFERENCE.**

Contents

	Page
Contents	1
Important Safety Instructions	2
01 Before you start	
Introduction	3
Replacing the battery	3
Hints on installation	3
02 Controls and locations of parts	
Main unit	4
Remote control	5
03 Connections	
Rear panel	6
Front panel	6
04 Basic operation	
Source control	7
Sound control	7
Surround control	7
05 Additional information	
Troubleshooting guide	8
Specifications	8

IMPORTANT SAFETY INSTRUCTIONS

 
The following safety precautions should always be followed when using domestic electrical products to reduce the risk of electric shock, personal injury or fire. It is important to keep these instructions for future reference after you have read and understood them and before attempting to use this product.

- This is a domestic electrical product, which must only be used for its intended purpose, in accordance with these instructions. The product should never be used in a commercial environment.
- Check the rating plate to ensure that the correct input voltage is being supplied to the product.
- Always switch the product off and remove the plug from the wall socket when not in use and before cleaning or changing accessories.
- Always ensure the product is switched off before connecting it to the mains supply.
- Never reach for an electrical product that has fallen into water. This may lead to an electric shock. Switch off the power at the wall socket and disconnect the plug before attempting to remove it from the water. After removing, never attempt to re-connect the product until it has fully dried and been tested and approved by a qualified technician.
- This electrical device is not designed to be used by children. Any child using this electrical product should be closely supervised by an adult to ensure all instructions and safety precautions are adhered to.
- Never allow the mains cable to come into contact with a heat source, water or any other liquid.
- Never carry this product by the mains cable as it could cause damage resulting in electrical failure when it is used again.
- Never operate this product if the cable or plug is damaged. NOTE: Only a qualified electrician should attempt repair.
- Be aware that many electrical products tend to become hot during use. Never touch the appliance when it is hot. Turn off the unit when not in use.
- Never operate this product with wet hands. Always ensure your hands, the device and work area, are dry before switching on.
- Never use this product outdoors. This product is designed for indoor use only.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not place the product in closed bookcases or racks without proper ventilation.
- Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- If this product stops working, switch off and unplug the product immediately. Seek professional advice before attempting to re-use this product.



WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to water or moisture. There are no user-serviceable parts inside. Refer servicing to a qualified electrician.

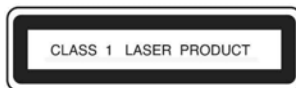

CAUTION

Visible and invisible laser radiation when open and interlocks defeated. To prevent direct exposure to laser beam, do not try to open the enclosure.

01 Before you start

Introduction

Congratulations on purchasing the **A-3402 2.1Ch Audio Sound Bar** . Please read this instruction manual to learn about the features and controls of this unit.

Hints on installation

We want you to enjoy using this product for many years so please use the following guidelines when choosing a suitable location:

Do...

 
 
 
- Use in a well ventilated room.
- Place on a solid, flat, level surface, such as a table, shelf or stereo rack.

Don't...

- Use in a place exposed to high temperatures or humidity, including near radiators and other heat-generating appliances.
- Place on a window sill or a place where the player will be exposed to direct sunlight.
- Use in an excessively dusty or damp environment.
- Place directly on top of an amplifier or other component in your stereo system that becomes hot in use.
- Use on a thick rug or carpet, or cover with cloth – this may prevent proper cooling of the unit.
- Place on an unstable surface, or one that is not large enough to support all four of the unit's feet.

02 Controls and location of parts

Main unit

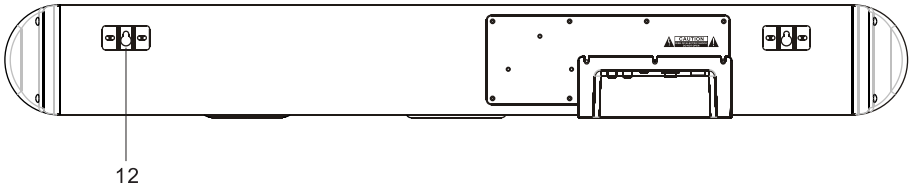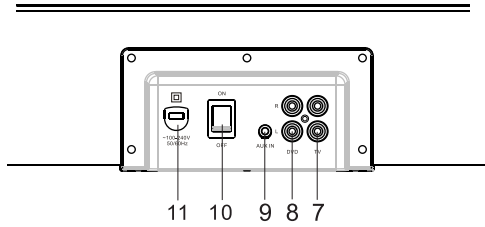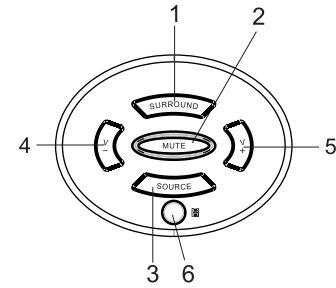

1 SURROUND

Enable/disable surround mode.

2 MUTE

Enable/disable sound output.

3 SOURCE

Select music source.

4 V-

Decrease sound volume level.

5 V+

Sound volume level increase.

6 REMOTE IR SENSOR

7 TV INPUT JACK

TV input to connect audio from a TV.

8 DVD INPUT JACK

DVD input to connect audio from a DVD player.

9 AUX IN

Insert external audio source using 3.5mm stereo connector.

 
10 POWER ON/OFF

11 POWER CABLE PLUG IN JACK

12 Wall brackets

Remote control

- 1 Treble level increase + / decrease - buttons
- 2 Bass level increase + / decrease - buttons
- 3 AUX source select button
- 4 TV source select button
- 5 DVD source select button
- 6 Mute button
- 7 Volume UP + /DOWN - buttons
- 8 Surround mode button

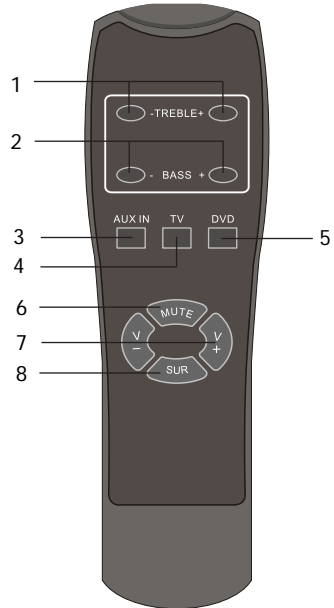


Using the remote control

Keep in mind the following when using the remote control.

- Make sure that there are no obstacles between the remote and the remote sensor on the unit.
- The remote has a range of about 6 m (19.7 ft.).
- Remote operation may become unreliable if strong sunlight or fluorescent light is shining on the unit's remote sensor.
- Remote controllers for different devices can interfere with each other. Avoid using remotes for other equipment located close to this unit.
- Replace the batteries when you notice a fall off in the operating range of the remote.

03 Connections

 Rear panel

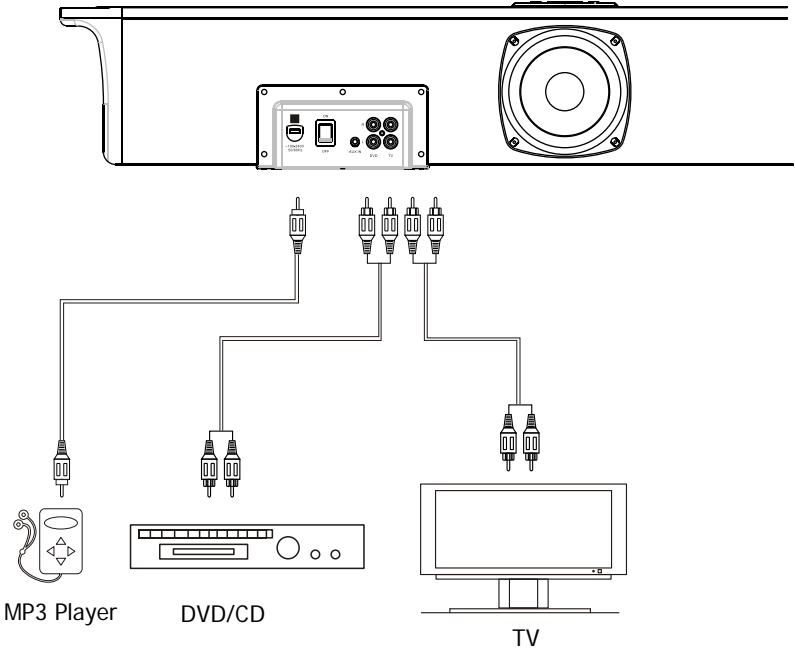

04 Basic operation

In normal use you can switch the soundbar on and off by power button on the Real Panel.

Selecting a source

Press the **SOURCE** button on the control panel repeatedly to cycle through the DVD, TV, AUX IN sources.

From the remote control. Press one of the source select buttons-DVD, TV or AUX IN.

Volume control

Press the **V+** or **V-** buttons on the control panel or on the remote control to increase or reduce the volume level from the soundbar.

Surround control

Press **SURROUND** button on the control panel or **SUR** button on the remote control to listen a to virtual surround environment. Press **SURROUND** again to return to stereo sound mode.

Bass and treble

Press the **TREBLE+** or **TREBLE-** buttons to change the level of treble.

Press the **BASS+** or **BASS-** buttons to change the level of bass.

05 Additional information

Troubleshooting guide

If the unit encounters any problem, please check the following first before seeking service.

No power/No display.

- Check that the power cord is connected securely.

No sound.

- Make sure the audio source is turned on, and a music track is selected and playing.
- Volume set at minimum. Increase the volume level.

Sound is too low.

- Increase volume setting of the audio source.
- Volume set at minimum. Increase the volume level.

System does not respond to remote control.

- The batteries in the remote are weak: Put in new ones.
- The distance between the remote and the player is too far: use the remote within its operating range.
- The remote is not pointed at the remote sensor of the player.
- There are obstacles between the remote and the player.
- Unplug the power cable for 1 minute, and then plug it back in. This will reset the system.

Specifications

AC power supply	:	AC 100-240V 50/60HZ
Dimensions	:	820 (L) x 100 (H) x 128 (D) mm
Net weight	:	5.0 kg
Woofer	:	4", 25 W
Mid-range	:	2.75", 9 W x 2
Total Power	:	43 W
Frequency response	:	60 Hz ~ 20 kHz
S/N	:	>70dB
Input Sensitivity	:	Woofer: 480mV
	:	Mid-range: 520mV